 




 
 


 
 
 
 
 







 
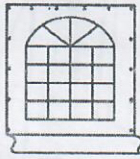 
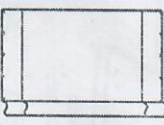 
 


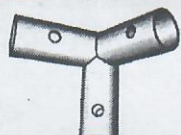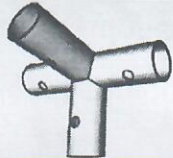
Part list for 6m PVC Party Tent, CombiTents

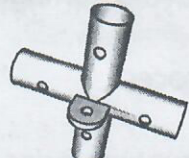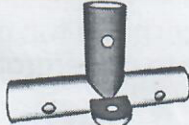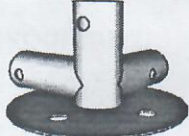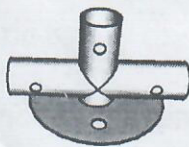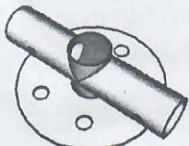Part No.		6m	8m	10m	12m	14m
1	 1470mm	16	20	24	28	32
2	 1940mm	27	34	41	48	55
3	 1880mm	8	10	12	14	16
4	 1495mm	8	10	12	14	16
5	 550mm	4	5	6	7	8
6	 110°	4	4	4	4	4
7	 110°	4	6	8	10	12
8	 140°	2	2	2	2	2
9	 140°	2	3	4	5	6
10		4	6	8	10	12
11		4	4	4	4	4
12		4	4	4	4	4
13		4	6	8	10	12
14		4	4	4	4	4


Part list for 6m PVC Party Tent, CombiTents

Part No.		6m	8m	10m	12m	14m
15		4	4	4	4	4
16		8	10	12	14	16
17		36	42	48	54	60
18		102	128	154	180	206
19		16	20	24	28	32
20		112	132	152	172	192
22		4	4	4	4	4
24		1	1	1	1	1
		(2 sections)	(3 sections)	(3 sections)	(4 sections)	(5 sections)
25		6	8	10	12	14
26		1	1	1	1	1
27		1	1	1	1	1
28		16	20	24	28	32


+ 6 stormpløkker med stropper.

6m PVC Party Tent, CombiTents

 
CombiTent roof explained

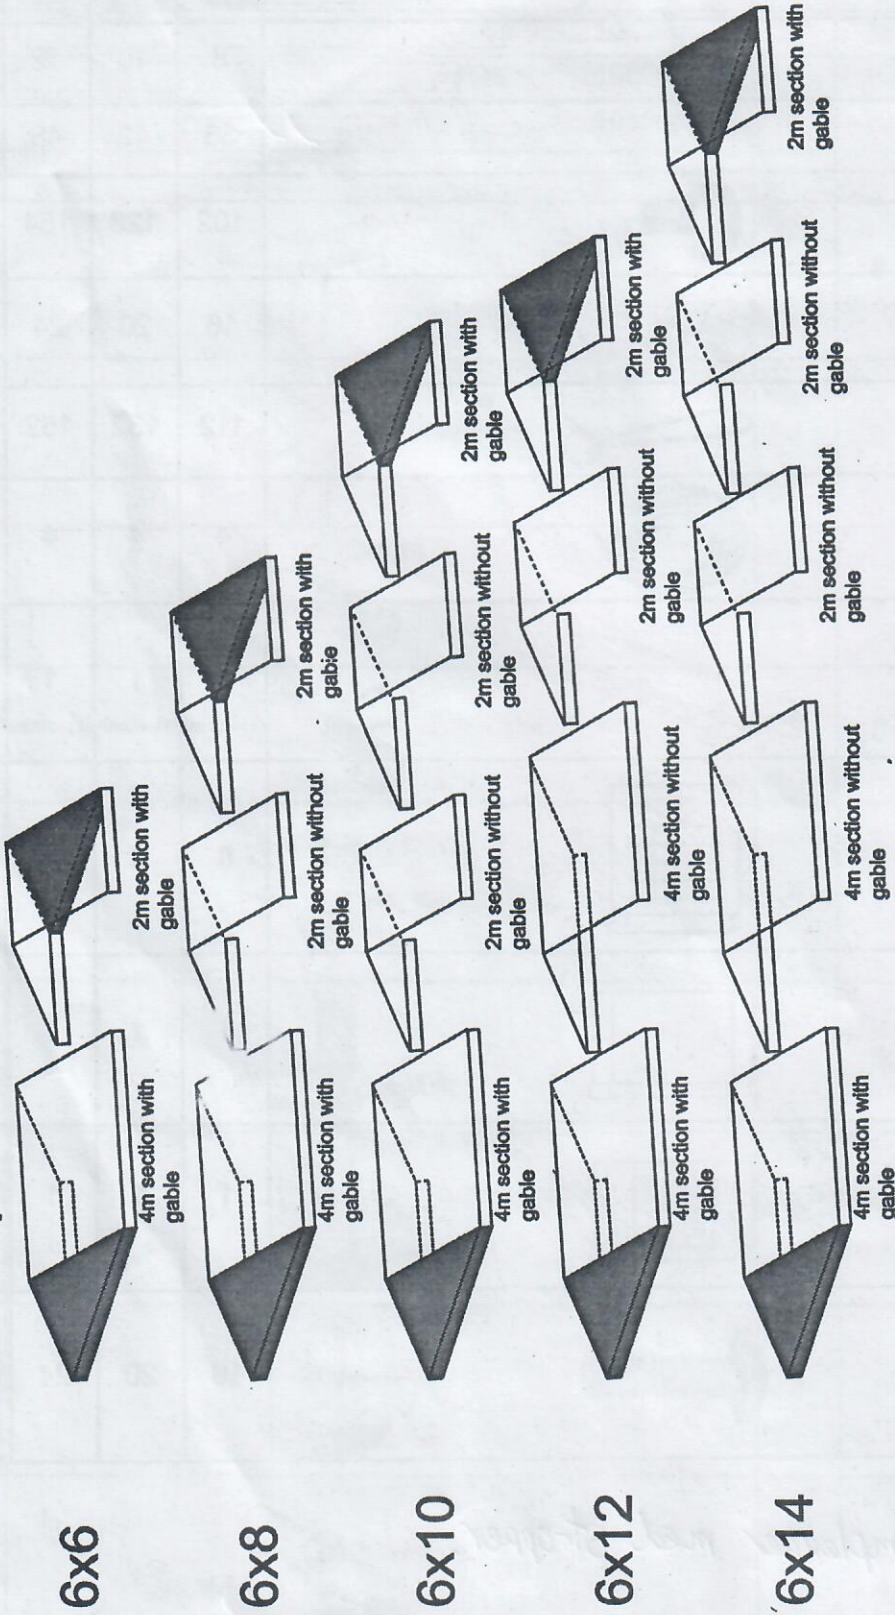


 When you are making your CombiTent shorter. Use the velcro overlay to detach roof sections.


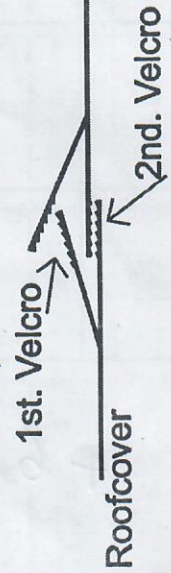


  Use the velcro overlay to attach 2 roof sections to each other.

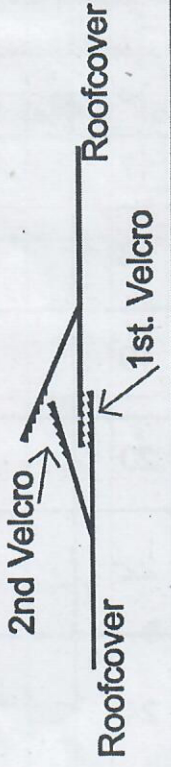


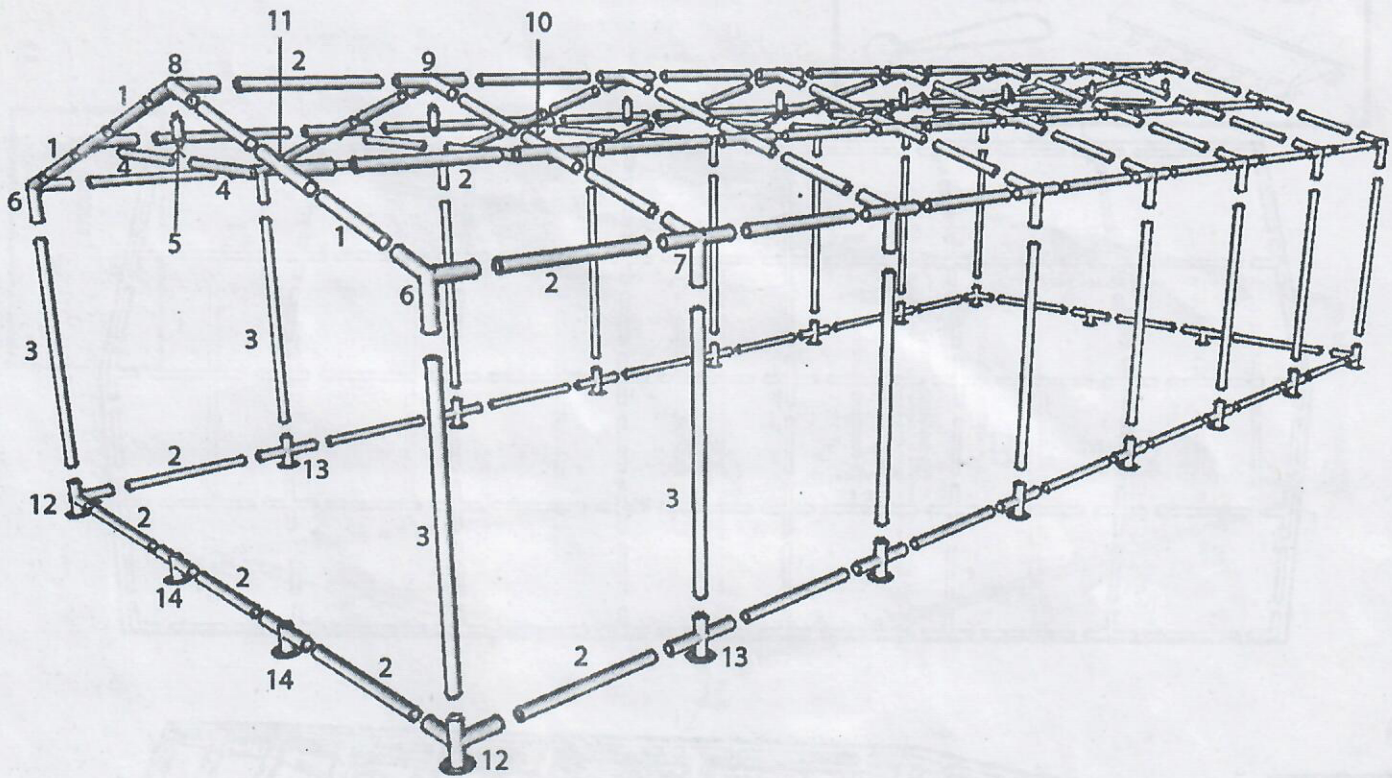





A

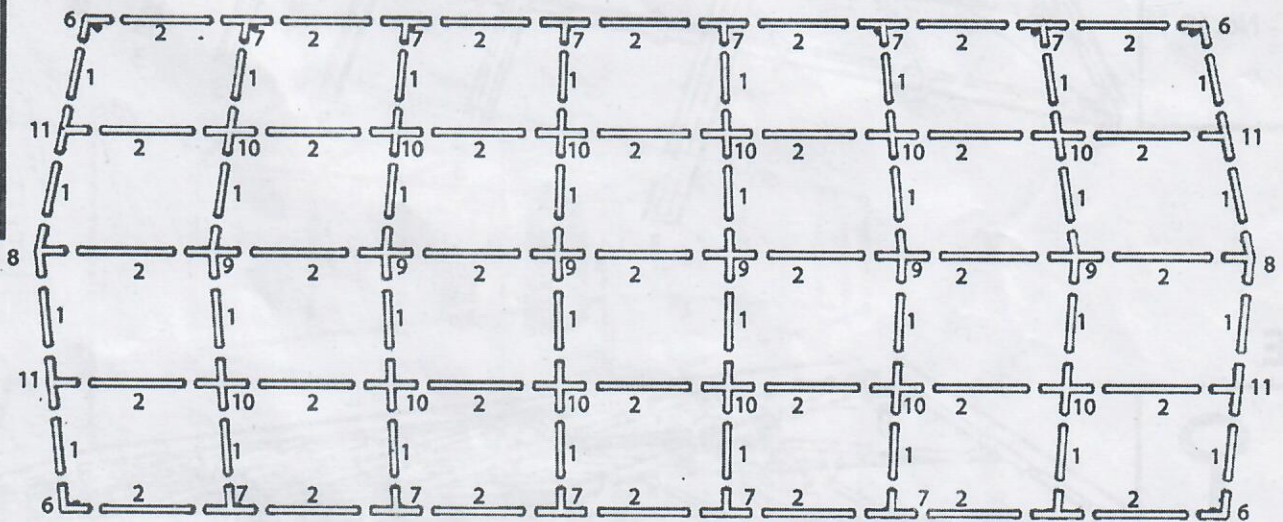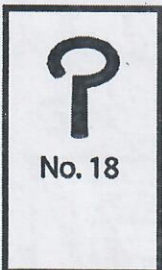  

B

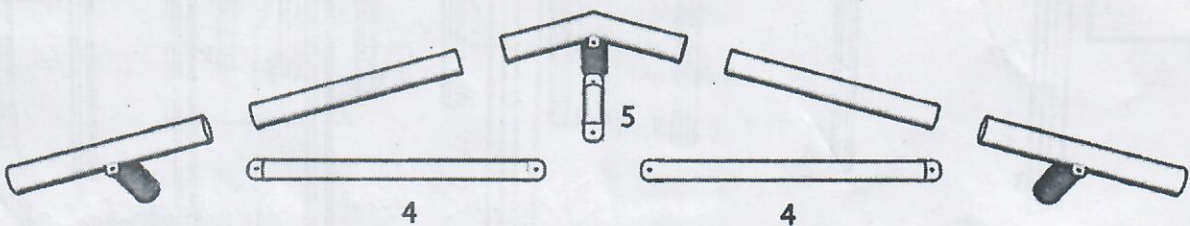 


DANCOVER.

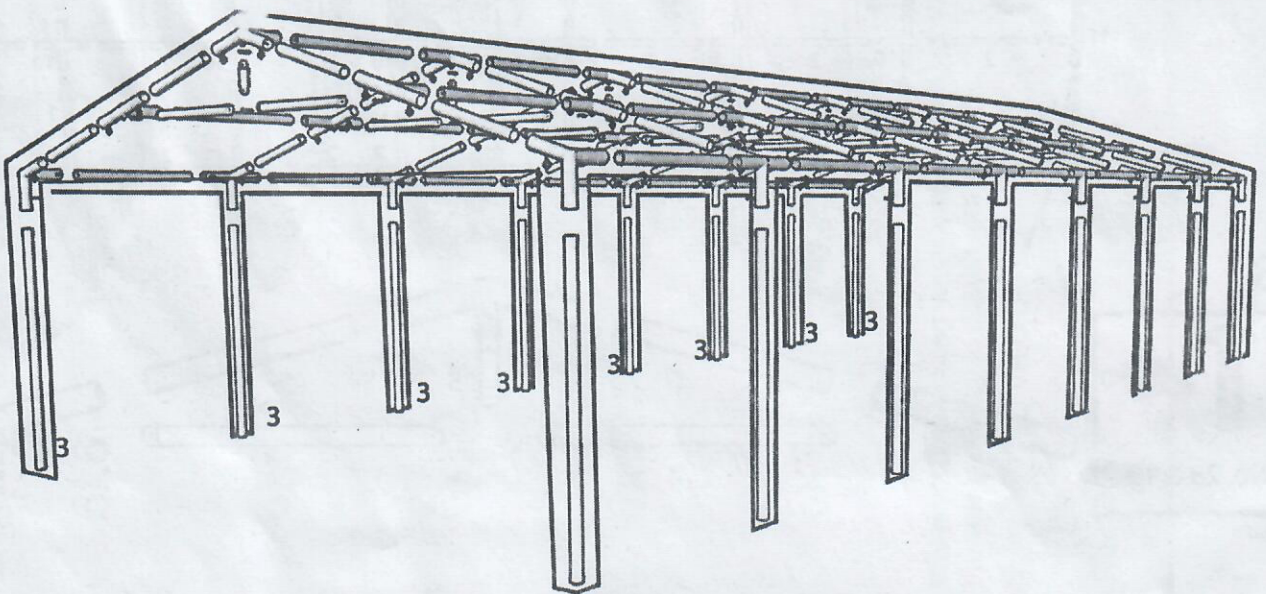 
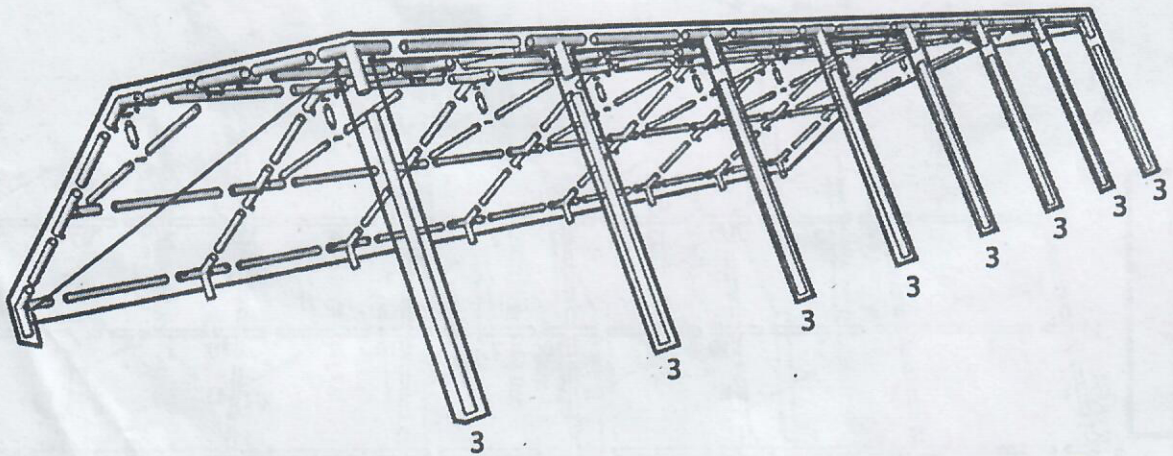 
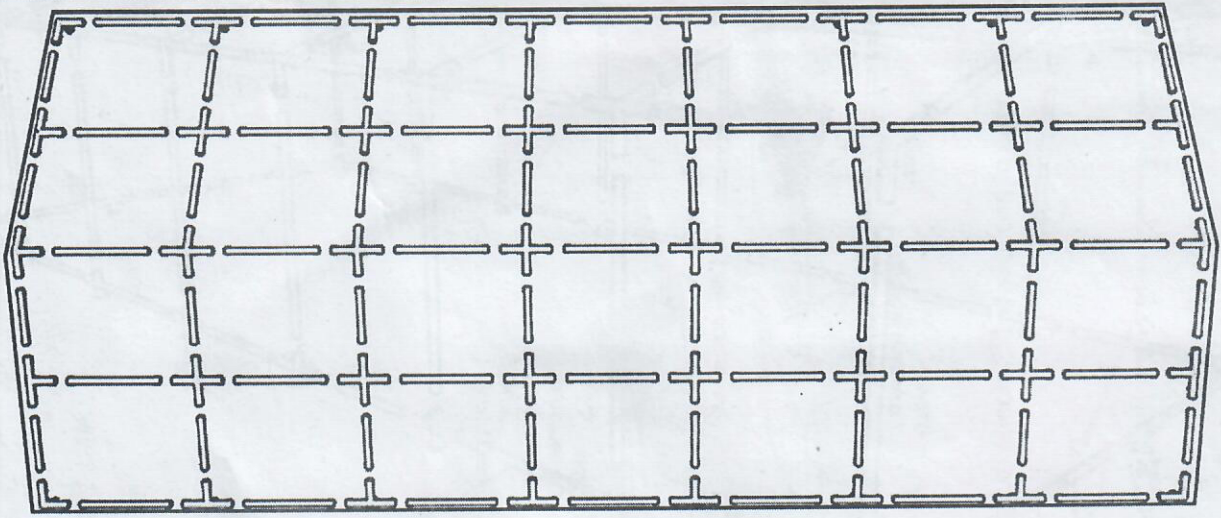 
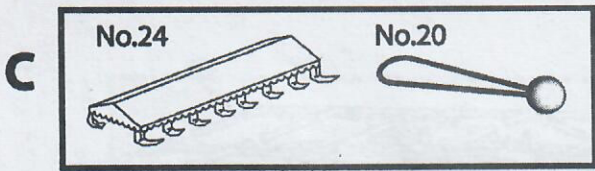 


DANCOVER®

 F


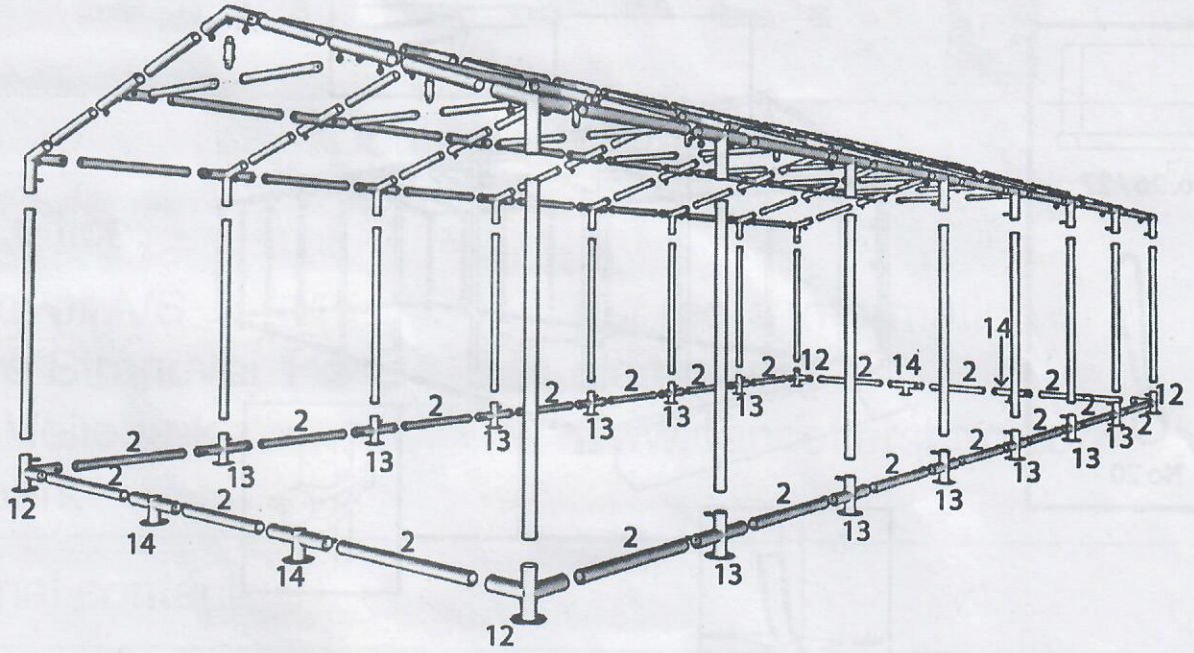


G

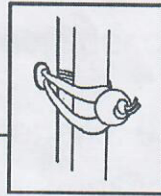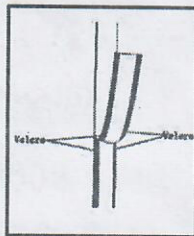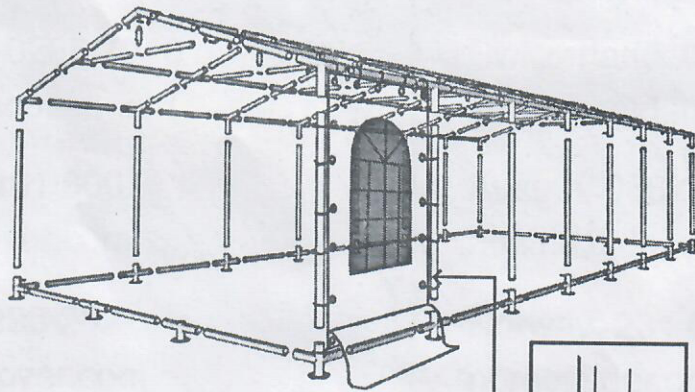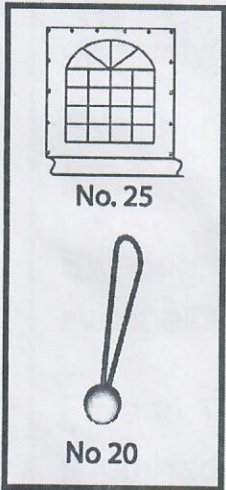    

DANCOVER®

  H

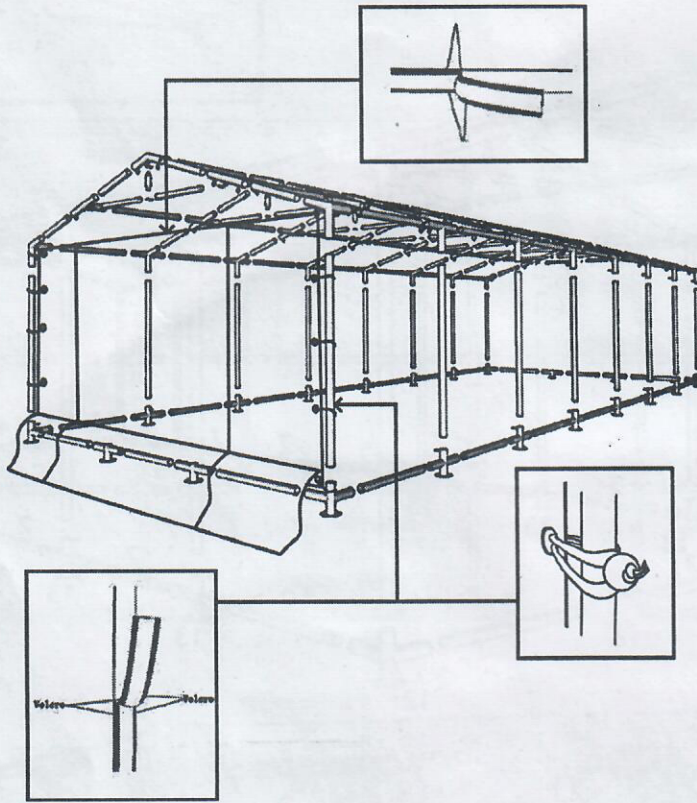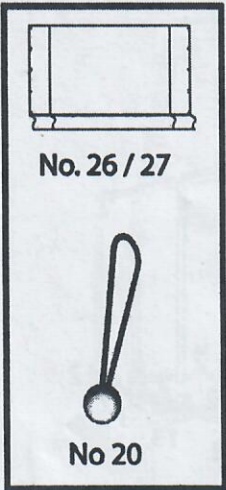

DANCOVER®